

How to determine whether or not your dishwasher is compatible with Ben's Bottle Washer:


Method A: Compare your dishwasher's bottom port to the images below. It must match to be compatible.



Remove Lower Wash Arm to Reveal Bottom Port



Bottom Port

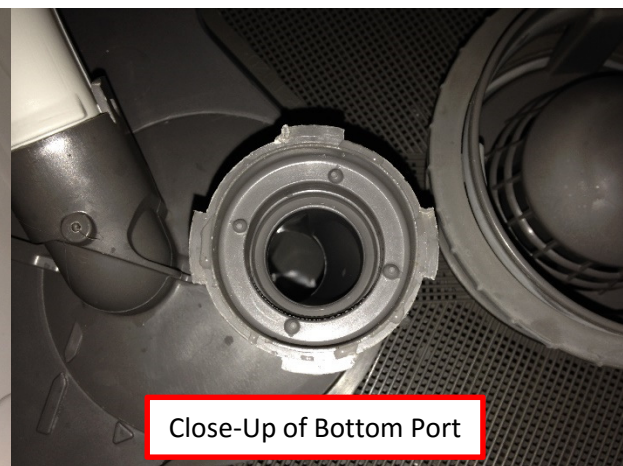

Close-Up of Bottom Port

Method B: If you know your dishwasher's brand and model #, you can search for it in the list of compatible dishwashers below.

Brand	Model #	Type
Kenmore / Sears	<u>66513012K11(0-3)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513013K11(0-3)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513014K11(0-3)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513019K11(0-3)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513023K11(0-3)</u>	DISHWASHER
Kenmore / Sears	<u>66513032K11(0-6)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513033K11(0-6)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513039K11(0-6)</u>	UNDERCOUNTER DISHWASHER

Kenmore / Sears	<u>66513252K11(0-5)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513255K11(0-5)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513259K11(0-5)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513272K11(0-8)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513273K11(0-8)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513279K11(0-8)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513292K11(0-6)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513293K11(0-6)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66513299K11(0-6)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66515023K11(0-3)</u>	UNDERCOUNTER DISHWASHER
Kenmore / Sears	<u>66515032K11(0-2)</u>	DISHWASHER
Kenmore / Sears	<u>66515033K11(0-2)</u>	DISHWASHER
Kenmore / Sears	<u>66515039K11(0-2)</u>	DISHWASHER
Whirlpool	<u>7WDF530PAYM(0-7)</u>	UNDERCOUNTER DISHWASHER
Amana	<u>ADB1100AWB(0-5)</u>	DISHWASHER
Amana	<u>ADB1100AWS(0-5)</u>	DISHWASHER
Amana	<u>ADB1100AWW(0-5)</u>	DISHWASHER
Amana	<u>ADB1400PYB(0-6)</u>	DISHWASHER
Amana	<u>ADB1400PYD(0-6)</u>	DISHWASHER
Amana	<u>ADB1400PYS(0-6)</u>	DISHWASHER
Amana	<u>ADB1400PYW(0-6)</u>	DISHWASHER
IKEA	<u>IUD3100BW(0-5)</u>	UNDERCOUNTER DISHWASHER
IKEA	<u>IUD6100BB(0-3)</u>	UNDERCOUNTER DISHWASHER
IKEA	<u>IUD6100YW(0-1)</u>	UNDERCOUNTER DISHWASHER
IKEA	<u>IUD8100YS(0-4)</u>	UNDERCOUNTER DISHWASHER
Inglis	<u>IWU9876(0-1)</u>	UNDERCOUNTER DISHWASHER
Jenn-Air	<u>JDB8200AWP(0-4)</u>	DISHWASHER
Jenn-Air	<u>JDB8200AWS(0-4)</u>	DISHWASHER
Jenn-Air	<u>JDB8500AWF(1-3)</u>	DISHWASHER
Jenn-Air	<u>JDB8500AWX(1-3)</u>	DISHWASHER
Jenn-Air	<u>JDB8500AWY(1-3)</u>	DISHWASHER
Jenn-Air	<u>JDB8700AWP(0-4)</u>	DISHWASHER
Jenn-Air	<u>JDB8700AWS(0-4)</u>	DISHWASHER
KitchenAid	<u>KUDE20IXBL(0-9)</u>	UNDERCOUNTER DISHWASHER
KitchenAid	<u>KUDE20IXSS(0-9)</u>	UNDERCOUNTER DISHWASHER
KitchenAid	<u>KUDE20IXWH(0-9)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF110PABB(0-4)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF110PABS(0-4)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF110PABT(0-4)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF110PABW(0-4)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF111PABB(0-4)</u>	UNDERCOUNTER DISHWASHER

Whirlpool	<u>WDF111PABW(0-4)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PAAB(0-5)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PAAD(0-5)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PAAS(0-5)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PAAT(0-5)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PAAW(0-5)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PCAB(0-1)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PCAD(0-1)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PCAS(0-1)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PCAT(0-1)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PCAW(0-1)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PLAB(0-5)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PLAD(0-5)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PLAT(0-5)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF310PLAW(0-5)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF320PADB(0-2)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF 320PADD(0-2)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF320PADS(0-2)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF320PADT(0-2)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF320PADW(0-2)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF510PAYB(0-8)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF510PAYD(0-8)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF510PAYS(0-8)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF510PAYT(0-8)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF510PAYW(0-8)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF530PAYB(0-7)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF530PAYM(0-7)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF530PAYT(0-7)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF530PAYW(0-7)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF530PLYB(0-7)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF530PLYM(0-7)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF530PLYW(0-7)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF530PSYB(0-7)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF530PSYM(0-7)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF530PSYW(0-7)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF540PADB(0-2)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF540PADM(0-2)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF540PADT(0-2)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF540PADW(0-2)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF750SAYB(0-3)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF750SAYM(0-3)</u>	UNDERCOUNTER DISHWASHER

Whirlpool	<u>WDF750SAYT(0-3)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDF750SAYW(0-3)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDP350PAAB(0-6)</u>	PORTABLE DISHWASHER
Whirlpool	<u>WDP350PAAW(0-6)</u>	PORTABLE DISHWASHER
Whirlpool	<u>WDT710PAYB(0-6)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDT710PAYE(0-6)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDT710PAYH(0-6)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDT710PAYM(0-6)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDT710PAYW(0-6)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDT790SAYB(0-3)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDT790SAYM(0-3)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDT790SAYW(0-3)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDT790SLYB(0-3)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDT790SLYM(0-3)</u>	UNDERCOUNTER DISHWASHER
Whirlpool	<u>WDT790SLYW(0-3)</u>	UNDERCOUNTER DISHWASHER